



# Plan de montage

07PM0110

2/09/2016

## MORGAN

MP 02-05F  
REV. 0

**MORGAN 110** Réf. 0701000/MP - 0701000/MU



### Composantes :



Base PM : Réf. 07102001/P



Réf. 071030010/R



Réf. 07816010/U



Réf. 07119002/P **2X**



- 1. Roues Ø 100 mm  
Réf. 0708064/3
- 2. Roues Ø 125 mm caout.  
Réf. 0734011274



Réf. 07190600/P **4X**



Kit n° 35  
Réf. 0700010/SV



Réf. 07190001/P



Seaux 6 L  
Réf. 0708218/B - 0708218/R



Réf. 0700112U


### Options :



Réf. 07291919B - 07291919R




Insert 2 x 60 L  
Réf. 07206020/U

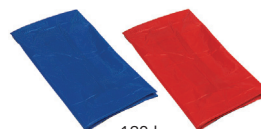

120 L  
Réf. 0703650/B - 0703650/R



Réf. 07119008U

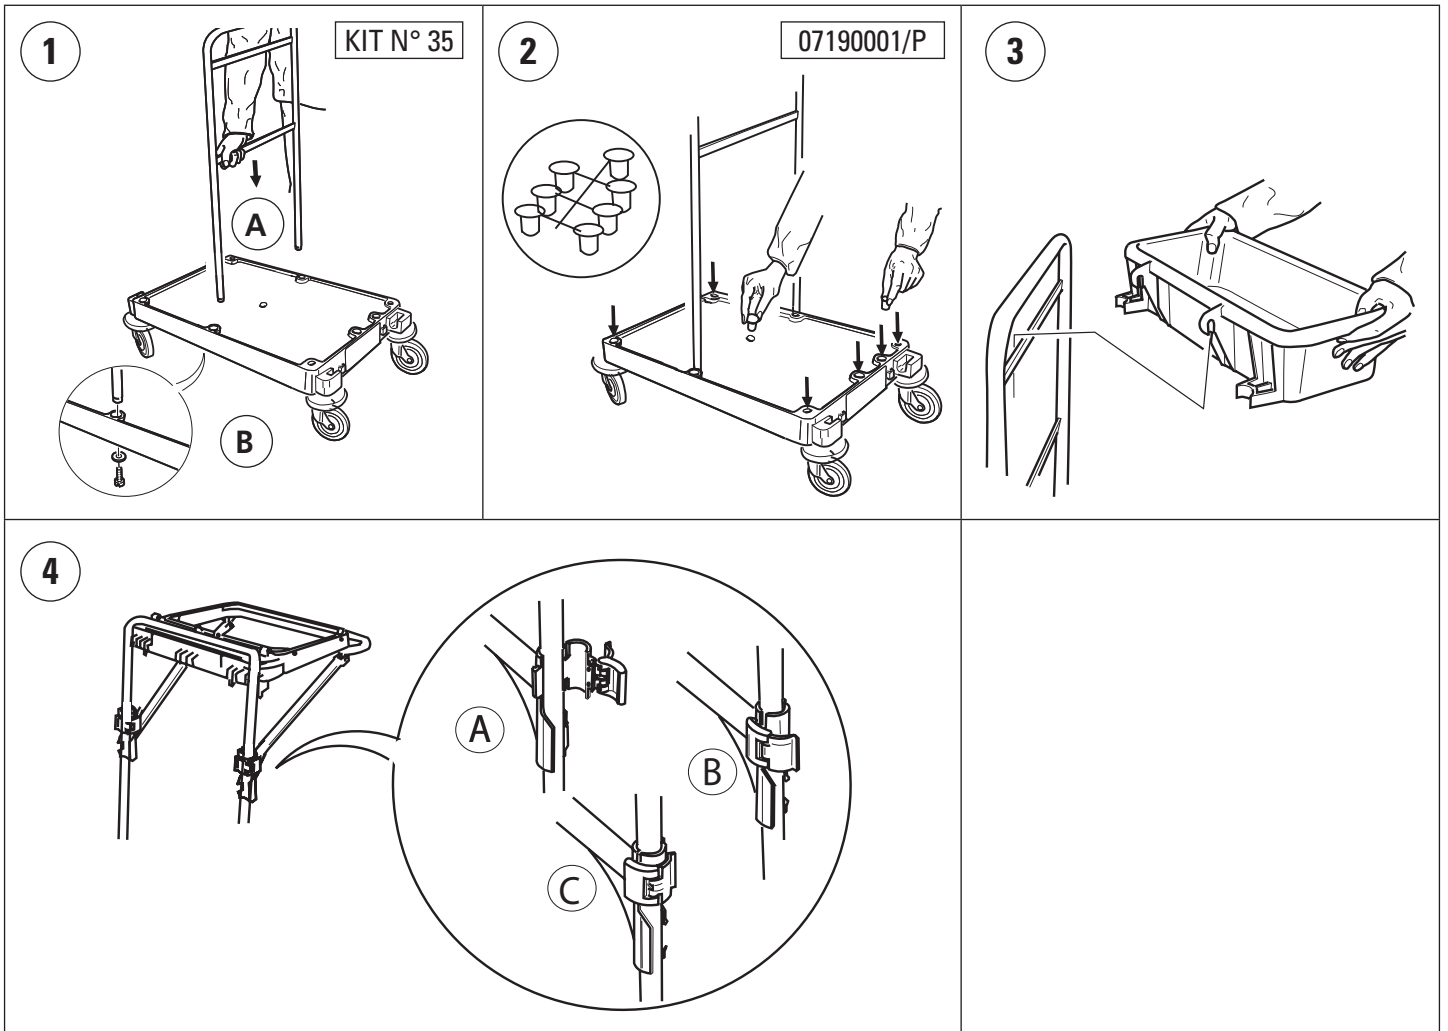

ZAE Heiden Est - 13 rue des Pays-Bas - 68310 WITTELSHEIM  
 Tél. 03 89 55 61 71 - Fax 03 89 55 61 81  
 e-mail : info@dmeFrance.com - Site : www.dme.fr